

REGAL® Industrial Sales, Inc. (Model RTL3860 {black} and RTL3890 {red}) Polymer Clamshell Trigger Lock Instruction Sheet

WARNING!

NEVER INSTALL ON A LOADED FIREARM

Failure to follow any of these instructions can result in death or serious injury to you or those around you. Putting a Trigger Lock on a loaded firearm OR loading a firearm that has a Trigger Lock on may result in serious injury or death!

- Prior to installing the Trigger Lock, read the Owner's Manual supplied with your firearm before loading, handling, or operating.
- Store firearms and ammunition separately and securely. Keep firearms and ammunition out of the reach of children.
- This lock may be cut or defeated by a determined individual and may not prevent intentional misuse of a firearm.


⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov. Use of this product, including its use after discharging firearms in poorly ventilated areas, cleaning firearms, or handling ammunition may result in exposure to lead. Have adequate ventilation at all times and wash hands thoroughly after handling this product.

NOTICE: Regal Industrial Sales Inc. does not guarantee that this product will fit all firearms. It is designed to block access to the trigger of most firearms when properly installed. Some Lever Action Rifles, MSRs (ARs & AKs), and firearms without a trigger guard cannot be blocked effectively with this product. Regal Industrial Sales Inc. is not liable for incidental or consequential damages.


INSTALLATION INSTRUCTIONS

- 1 Put the firearm's safety mechanism in the "ON" ("SAFE") position. Keep the firearm pointed in a safe direction while handling the firearm and when installing or removing the Trigger Lock.
- 2 Unload all ammunition from the firearm as described in the firearm's Owner's Manual.
- 3 Visually and physically inspect the chamber, receiver, and magazine to ensure that the firearm is completely unloaded.
- 4 To open the Trigger Lock, unscrew the locking bolt by turning counter-clockwise until you can pull the two Trigger Lock halves apart. (See Picture #1)
- 5 While pointing the firearm in a safe direction, position the left half of the Trigger Lock on the left side of the firearm trigger guard. (See Picture #2)
- 6 Insert the right half of the Trigger Lock (the side with guide post and locking bolt) into the right side of the trigger guard and matching up with the left half of the Trigger Lock (See Picture #3). While holding both Trigger Lock halves together, take the key and turn the locking bolt clockwise until the two halves are as tight as possible (See Picture #4).
- 7 Inspect the Trigger Lock to ensure the guidepost on the right half of the Trigger Lock is in the guide hole on the left half of the Trigger Lock. Pull on Trigger Lock halves to make sure they are tight. If the Trigger Lock halves are not aligned, go back to Step 4 and start again.
- 8 Store the key in a separate and secure location away from the locked firearm.
- 9 To Unlock: To open the Trigger Lock, unscrew the locking bolt by turning counter-clockwise until you can pull the two Trigger Lock halves apart. (See Picture #1)


Picture #1

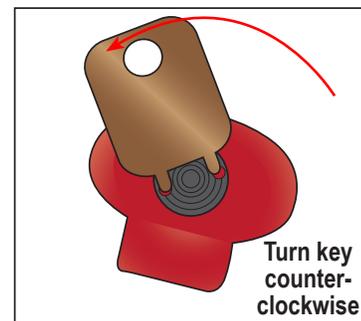

Picture #2

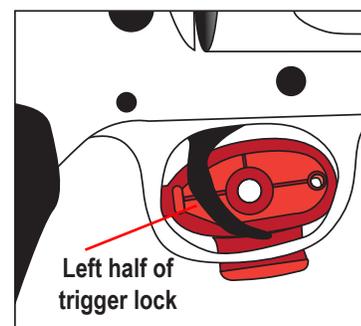

Picture #3

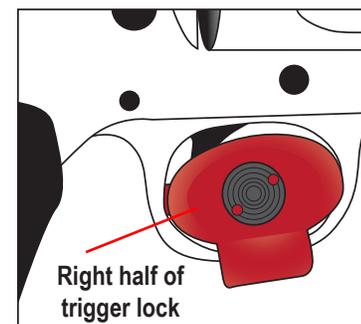

Picture #4

